




WitchDoctor's Billet Specialties LLC
Cruise Control – CCB-08
www.buywitchdoctors.com

Attention:

This is an install at your own risk item. If you are not capable of installing it successfully then we suggest you take this item to a professional shop.

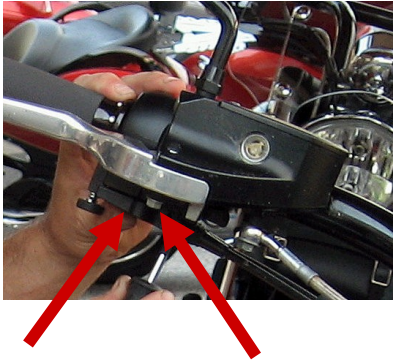

Step1: Remove the 2 screws that hold on the lower switch housing. Remove the cover gently as to not disturb the cables.

Step 2: Depending on your style grip you may need to file down the rubbing block. You want to make sure that the thumb screw is in far enough that the spring has tension on it. If not it will vibrate out so be careful.



Step 3: Install the same bolts that held on the stock cover in to new cruise cover and tighten.

Tighten thumb screw to set tension on throttle.
Tip: Apply just enough tension to hold the throttle but not so much that you cant twist the throttle off.

Double check all bolts. Start bike and set the idle to get used to how much tension is needed.

